

2D Lidar

# Scanning Laser Range Finder UGM-50LXP




CE RoHS



#### 1. General

The UGM-50LXP scans a semicircular field using a laser beam ( $\lambda$ = 905 nm), then calculates coordinates by measuring the distance to an object and its corresponding step angle and detects obstacles within the setting area.

- This product can output distance data using the communication protocol SCIP.
- This product is Class 1 laser product.
- · You can set scan speed / angular resolution from three modes.
- It is possible to reduce the influence of interference between multiple units of this product using the synchronized rotation of the motor inside products. This function synchronizes the motor rotation to an external reference signal.
- The UGM-50LXP has a function of the dirt detection (contamination detection) on the optical window. This product can output a control signal when detecting dirt on the optical window.

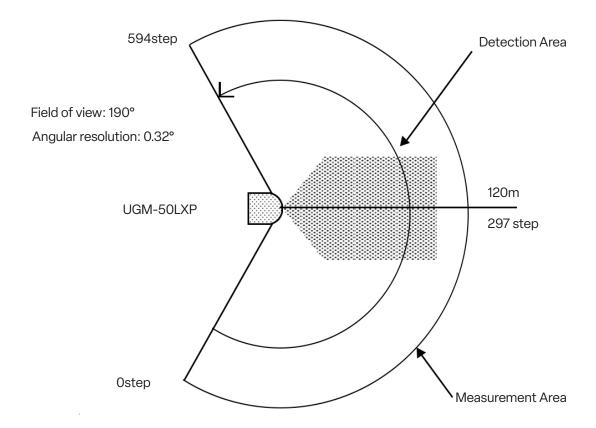

The specifications in normal mode, low speed mode, and high resolution mode are as follows.

Angular resolution/Scan speed	Angular resolution	Field of View	Step	Front step
Normal Mode 20ms / 3000rpm	0.32°	190°	0 to 594 step	297 step
Low speed mode 40ms / 1500rpm	0.16°	190°	0 to 1188 step	594 step
High resolution mode 80ms / 750rpm	0.08°	190°	0 to 2376 step	1188 step



### 2. Disclaimer

- The UGM-50LXP (hereafter referred as sensor) is not certified for functional safety.
- This sensor cannot be used for human body detection as per the machinery directives.
- This sensor emits laser for measurement. Sensor's operation may become unstable under the influence of strong interference light or when emitted lights are not reflected back from object.
- The sensor's operation may become unstable due to rain, snow and fog or due to dust pollution on the optical window.
- Rules and regulations related to safety should be followed strictly when machine users and system designers operates the sensor.
- When there is a risk that the this sensor is used for weapons of mass destruction, weapons and equipment aimed at killing human beings, and relevant technologies, etc., or when its usage for those purposes has become clear, sales may be prohibited in accordance with the Foreign Exchange and Foreign Trade Act, and the Export Trade Control Order (Japanese law). Moreover, regarding export of products, the formalities according to laws/Export Trade Control Order are implemented in order to maintain international peace and safety.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Before using the sensor, please read carefully and understand this specification.



#### UGM-50LXP

## 3. Product Specs

Product Name	2D LiDAR	
Model	UGM-50LXP	
Light source	Laser semiconductor (905nm), FDA Laser Safety Class 1 (IEC60825-1:2014)	
Supply voltage	DC 24V +/-10%	
Supply current	Steady state current: 1A or less, Starting Current: 1.5A or less, without Heater *1	
Power Consumption	24W or less (Steady state and current)	
Heater Voltage	DC24V	
Heater Current	Steady state and Starting current: 2A or less, Only Heater *2	
Heater Power Consumption	48W or less	
Detection range and object	Guarantee detection range: 0.1m to 50m*3 (10% Reflectance Black paper 500mm×500mm) 0.1m to 120m*4 (90% Reflectance white Kent paper1400mm×1400mm) Maximum area setting: 120m (Distance output range: 160m) Minimum detectable size Normal mode: 65mm(5m), 130mm(10m), 260mm(30m) High resolution mode: 33mm(5m), 65mm(10m),130mm(30m)	
Average Accuracy by distance	10% Reflectance Black paper 0.1m to 30m: ±30mm (Indoor 1,000lx or less) 30m to 50m: ±40mmm (Indoor 1,000lx or less) 0.1m to 50m: ±50mm*5 (Outdoor 100,000lx or less) 90% Reflectance white Kent paper 0.1m to 50m: ±30mm 0.1m to 50m: ±50mm*5 (Outdoor 100,000lx or less)	
Measurement resolution	1mm	
Repeat accuracy	10% Reflectance Black paper 0.1m to 30m : σ < 9mm (Indoor 1,000lx or less) 30m to 50m : σ < 15mm (Indoor 1,000lx or less) 0.1m to 50m : σ < 15mm*5 (Outdoor 100,000lx or less) 90% Reflectance white Kent paper 0.1m to 50m : σ < 9mm (Indoor 1,000lx or less) 0.1m to 50m : σ < 15mm*5 (Outdoor 100,000lx or less)	
Scanning angle	190*	
Scan speed/ Angular resolution	20ms*6 (Normal mode 3000rpm) / approx. 0.32°(360°/1125) 40ms*6 (Low speed mode 1500rpm) / approx.0.16° (360°/2250) 80ms*6 (High resolution mode 750rpm) / approx.0.08° (360°/4500)	
Start up time	Within 30 sec after power supply	
Outputs	4 PNP OUTPUT :Synchronization master output, Synchronization output, Malfunction output, Contamination output (Open collector output DC30V 50mA MAX.)	
Output response time	40msec or less (Normal mode) 80msec or less (Low speed mode) 160msec or less (High resolution mode) In either case, change depending upon the delay setting	
Inputs	3 INPUTS : Synchronous input, IP Reset input, Reboot input (Photo coupler input, Cathode common, Input ON current 2mA)	
	( ocapiepag catioas common,pat c canonic z ,	
Interface	Ethernet 100BASE-TX (Auto-negotiation)	



#### **Specifications (continued)**

Ambient temperature and humidity	-10 to +50°C below 85%RH -30 to +50°C below 85%RH (While using the heater) (Without dew, frost)	
Environment effect	A measured distance will be shorter than an actual distance under the influence of rain, snow and direct sunlight.*7	
Vibration resistance	10 to 150Hz 5G IEC60068-2-6:2007	
Shock resistance	3 times 50G, 1000 times 25G IEC60068-2-27:2008	
EMC standards	(EMI) EN61326-1:2013 EN55011:2009 + A1:2010 (EMS) EN61326-1:2013 EN61000-4-2:2009 EN61000-4-3:2006 + A1:2008 + A2:2010 EN61000-4-4:2012 EN61000-4-6:2009 EN61000-4-8:2010	
Protective structure	IP67 IEC60529:2001	
Insulation resistance	10ΜΩ	
Weight	Approx. 4.2kg (without connection cables)	
Material	Optical window : Polycarbonate, Body : Aluminum	
Dimensions(W×D×H)	155mm × 166mm × 176mm (Without connector) External dimension: MC40-03391	


#### **Notes:**

- \*1 When a heater power is not connected or OFF.
- \*2 This is the current consumption of only heater. Details of heater operation is described in "7. Heater Function".
- \*3 Indoor environment (under fluorescent lamps, 1,000 lx or less)
- \*4 In the high resolution mode(750rpm), the guaranteed detection range is 120m.
- \*5 Detection cannot be guaranteed when direct light (such as sunlight) enters into the inside of the product.
- \*6 You must restart the sensor after changing the scan speed.
- \*7 Please check the influence of ambient environment on the detection accuracy using a product.



#### 4.1 Power supply connector


M12 4 core A-code socket (Female)

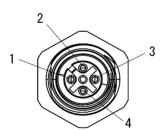

PIN No.	Function
1	Sensor power supply +V (24V±10%)
2	Sensor power supply GND -V (0V)
3	Heater power supply (24V±10%)
4	Heater power supply GND(0V)

#### **4.2 Ethernet Connector**


M12 4 core D-code plug (Male)



PIN No.	Function
1	TX+
2	RX+
3	TX-
4	RX-


#### 4.3 I/O Connector

I/O1: M128 core A-code socket (Female)

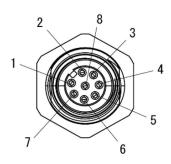

PIN No.	Function	I/O
1	Reboot	IN
2	IP Reset	IN
3	Synchronization input	IN
4	Synchronization output	OUT
5	Synchronization master output	OUT
6	NC	-
7	+COM	-
8	-COM	-

I/O2: M1212 core A-code socket (Female)

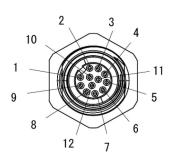

PIN No.	Function	PIN No.
1	Contamination output	OUT
2	NC	-
3	Malfunction output	OUT
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
10	-	-
11	+COM	-
12	-COM	-




#### 4.4 Input/output circuit

Input: Photocoupler input (Cathode common, 5mA during each input ON, 0.5 mA or below during OFF)

Output: Open-collector output

Item	Specification
Maximum output current	50mA
Maximum voltage	30V
Output residual voltage	1V or less
+COM Power supply range	24±10%V

#### Example of connecting the input/output circuit

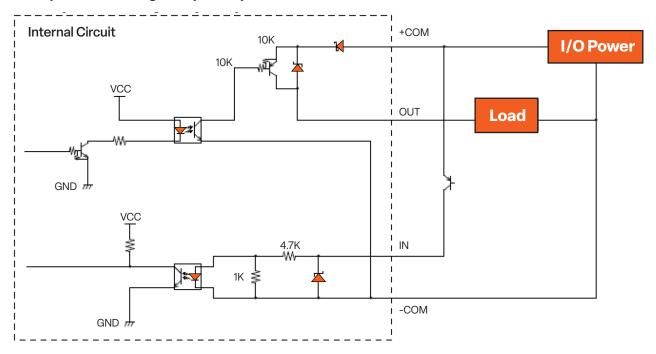

Connect both +COM and -COM to I/O Power.



## 5. Control signal

#### **5.1 Malfunction Output**


- (1) Laser malfunction: When laser emission is not possible or laser power has exceeded the safety class 1.
- (2) Motor malfunction: When motor rotation inside the sensor is unstable. When a malfunction occurs, the UGM-50LXP switches the malfunction output to OFF (Low level), and then stops laser emission and motor rotation. You can check the error code using communication protocol SCIP. Refer to troubleshooting table in section 6 for error details.


#### 5.2 Synchronization output

The UGM-50LXP outputs a pulse of 1ms every one scan for synchronizing with the scanning.

The timing of the synchronization signal is shown in the figure below.

- \* Scan speed 20ms (In normal mode)
- \* Description based on scan speed 20 ms

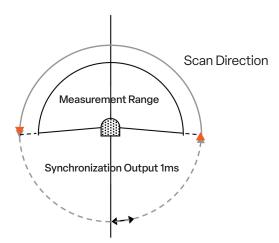

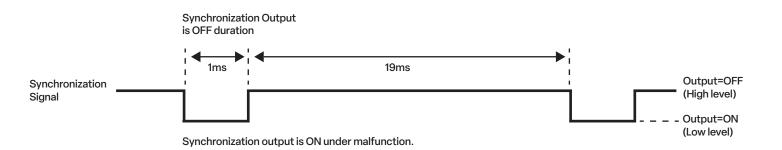

#### 5.3 Synchronization master output

This is a reference clock signal for synchronizing motor rotation of each sensor.


The UGM-50LXP outputs the clock signal with cycle of 20ms and an output-OFF period (Low level) of 5ms (Duty25%). Synchronization master output is continued even in the malfunction state.



#### 5.4 Synchronization input

In a multiple connection of UGM-50LXP, you can synchronize with motor rotation inside each sensor. By connecting the synchronization input terminal of the slave to both synchronization master output terminal and the synchronization input terminal of the master, you can synchronize the motor rotation of the slave with the motor rotation of the master. Synchronization is performed on the falling edge of the clock signal.

#### 5.5 Example of connection between multiple sensors for synchronization of motor rotation

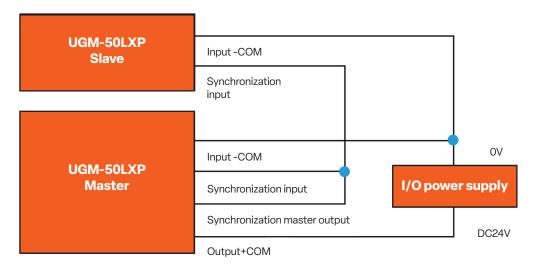


As shown in the figure above, it is possible to synchronize the motor rotation of the slave with the motor rotation of the master according to the shifted scanning time of each slave sensor by setting phases of each slave sensor.

You can confirm and configure phases using the application software.

#### 5.6 Timing chart of synchronization input/output


•When the synchronization master output of the master is not connected to the synchronization input of the slave, the synchronization output terminals of both the master and the slave sensors continue to output pulse signals accordingly with a cycle of 20ms and low of 1ms.

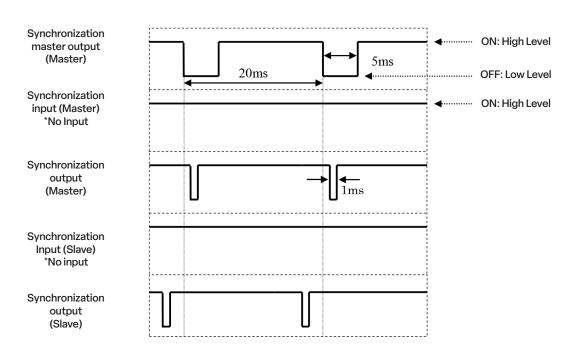



When the synchronization master output of the master is connected to the synchronization input of the slave, the master sensor can synchronize falling edges of the synchronization master output signal with falling edges of the synchronization output signal.

When the phase value is set, the synchronization output with the phase is shifted by the set value only. Error of phase setting should be within ±1ms.

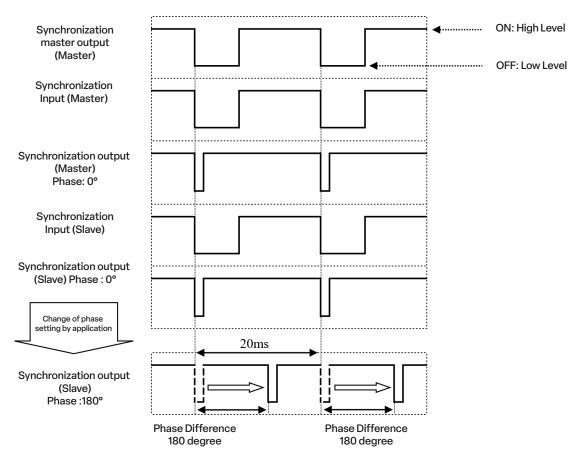

#### 5.7 IP Reset input

Return the IP address to the initial value (192.168.0.10). Switch to ON (High level) for 2 seconds or more, then switch to OFF (Low level) for IP address initialization.

#### Notes:

Before you switch off the sensor power, you need to make sure that IP Reset input is in the Low level. If you switch off the sensor while IP Reset input is in High level, the sensor may not start normally after that.

#### 5.8 Reboot input

When switching to ON (High level) for 2 seconds or more, you can restart the sensor operation.

#### 5.9 Contamination output

When detecting dirt on the optical window (contamination detection): ON (High level)
When no dirt is detected on the optical window (No contamination detection): OFF (Low level)



## 6. Troubleshooting

#### 6.1 Error code table

You can obtain the causes of errors from STAT line of the "II" command response in the communication protocol SCIP. The error codes and solutions from the STAT line are as follows in table.

ID	Message	Meaning	Solution	
000	no error.	Normal operation	No action is required.	
051	internal setup failed.	Sensor processing system error		
052	internal chip access failed	Carra as above		
100	Internal Chip access falled	Same as above	Sensor has failed and needs to be repaired.	
200	encoder error.	Face devices:		
201	Chedder error.	Encoder error		
250	motor startup failed.	Motor error		
251	motor rotation error.	Unstable motor rotation	Reduce the vibration and noise to the sensor	
300	laser too high.	Laser error		
301	laser too low.	Same as above	Reduce the ambient light and noise to the sensor	
302	laser no echo.	Same as above		

#### 6.2 About distance values

х	Meaning		
35 ≤ x ≤ 160,000	Distance values	Measured distance values (mm)	
x = 262,140 (3FFFC)	No echo	When no object is detected, or the detected level inside the product is below a threshold value. (the value of light receiving shows 0)	
x = 262,142 (3FFFE)	Short distance error	When a distance from this product to object is 34 mm or below.	
x = 262,143 (3FFFF)	Long distance error	When a detected object is at the location of 160,001 mm or above.	



#### 6.3 Relation between product states and LED displays

	LED			
Product States	Yellow green (Power)	Orange (Heater)	Blue (Detection)	Red (Malfunction)
During start up	ON	ON when heater is activated.	Blinks (2sec. intervals)	OFF
During operation	ON	ON when heater is activated.	ON when an object is detected.	OFF
During Malfunction	ON	OFF	OFF	OFF
During Motor stop (sleep)	ON	ON when heater is activated.	Blinks (4sec. intervals)	OFF
During contamination detection	Same as operation			
IP initialization	ON	ON when heater is activated.	Blinks (1sec. intervals)	Blinks (1sec. intervals)

#### 6.4 Relation between product states and output signals

Product states	Synchronization master output	Synchronization output	Contamination detection	Malfunction output
During start up	Continuous output after power supply is ON.	Tr=ON(High)	Tr=ON(High)	Tr=ON(High)
During operation		1 ms per cycle Tr=OFF(Low)	Tr=OFF(Low)	Tr=ON(High)
During Malfunction		Tr=ON(High)	Tr=OFF(Low)	Tr=OFF(LOW)
During Motor stop (sleep)		Tr=ON(High)	Tr=OFF(Low)	Tr=ON(High)
During contamination detection		Same as operation	Tr=ON(High)	Tr=ON(High)
IP initialization		Tr=ON(High)	Tr=OFF(Low)	Tr=OFF(Low)

<sup>\*</sup> Output signals will be undefined immediately after power-ON. The undefined time depends on motor speed(scan speed).

<sup>\*</sup> From IP initialization completion to restart, output signals will be undefined.



#### 7. Multi-echo function

This product has the multi-echo function. In the same step, the obtained distances and values of light receiving is called the multi-echo.

This product can receive up to 4 echoes (the 1st. echo, the 2nd. echo, the 3rd. echo, and the last echo) per step, and can acquire distances and values of light receiving on each step.

If laser light emitting from this product is reflected off transparent objects, rain, fog, dust, and boundary between objects, it receives both echoes from those objects and echoes from other objects ahead of those objects. However, when distances between objects are too close or reflectance of objects is low, this product may not detect echoes.

#### 8. Heater function

This product has a heater inside to prevent dew condensation on the optical window. You can select either "Active" or "Inactive" using the application software. The initial operation mode of the heater function is Inactive.

When the heater function is activated, the heater will operate if the temperature inside the product decreases below 0°C.

When the temperature inside the product increases more than 10°C, the heater will stop its operation automatically.

## 9. Optical window contamination warning function

This function is enabled "Active" using the application software. When this function is enabled "Active", contamination output will switch to ON (High) if the optical window is contaminated above a certain level. The UGM-50LXP will continue to operate and there will be no malfunction stop.

## 10. Ethernet setting

#### 10.1 Default value

IP default value: 192.168.0.10

Port number: 10940

#### 10.2 About changing IP address

You can change IP address using a dedicated application software.

#### 10.3 IP address initialization

Switch IP reset input to ON (High) for 2 seconds or more, then switch to OFF (Low).







ISO14001 Certified JQA-EM3873

ISO9001 Certified JQA-1742

- Read instruction manual carefully before use.
- Products published in this brochure are intended to be used under specific conditions.
- For product related questions or technical issues, please contact our offices.

#### HOKUYO AUTOMATIC CO.,LTD.

Higobashi Union Building, 1-9-6 Edobori, Nishi-ku, Osaka-shi,Osaka, 550-0002 Japan TEL: +81-6-6441-2239 FAX: +81-6-6441-2204

URL: http://www.hokuyo-aut.jp E-mail: info@hokuyo-aut.jp

#### **●**EUROPE

HOKUYO AUTOMATIC CO., LTD. Amsterdam Branch Prof. J.H. Bavincklaan 2, 1183 AT Amstelveen, The Netherlands TEL: +31-20-240-0110

F-mail: info@hokuyo-aut.jp

#### **OAMERICA**

Hokuyo Automatic USA Corporation 2019 Van Buren Ave. Suite A, Indian Trail, North Carolina 28079 U.S.A. TEL: +1-704-882-3844 E-mail: sales@hokuyo-usa.com

#### ●KOREA

HOKUYO KOREA CO., LTD. 104-211, 397 Seokcheon-Ro, Ojeong-Gu, Bucheon-City, Korea TEL: +82-32-624-3194

E-mail: hokuyokorea@naver.com